


DECORSHADE

BLINDS

WOODWEAVE ROMAN BLIND FITTING INSTRUCTION

fittings

BRACKETS TO SUIT WIDTH OF BLIND

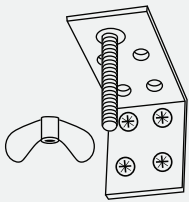

SCREWS: MIN 4



WOOD SCREWS: MIN 4



RAWL PLUGS: MIN 4



CHILD SAFETY CLEATS X 2





Instructions

step one

OUTSIDE RECESS:
If fitting the blind outside the window, measurements (C) will need to be the same. To work out (C), simply subtract (B) from (A) and divide the answer by two. Follow the instructions for FACE FIXING.

INSIDE RECESS:
Decide whether FACE or TOP FIX. FACE FIX brackets to the window frame. TOP FIX bracket to the lintel if the window is uPVC, or if there are any obstructions, eg. handles.

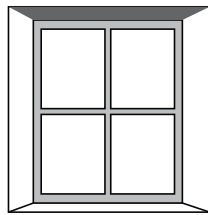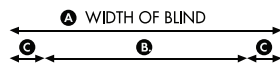

■ TOP FIX ■ FACE FIX

step two


Place blind in fitting position. Space the brackets evenly.



■ POSSIBLE BRACKET POSITIONS


step three

TOP FIXING: (see right)
Measure the distance that any handles protrude from the frame, **A**. Mark this measurement on the lintel and use it to position the back of the bracket. Choose one of the slots in the headrail nearest to the cord lock (this will hold the blind at the height you want when you raise and lower it) and measure the distance from the end of the blind. Use this measurement to fix a bracket on the lintel and do the same thing using a slot that's a similar distance from the other end of the blind, so that the blind is evenly balanced between the 2 brackets.

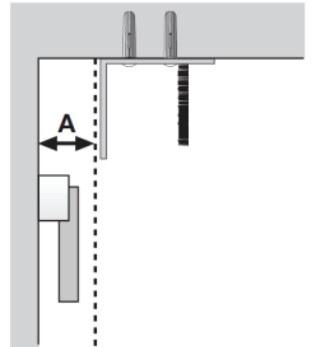


step four

FACE FIXING (see below)
Choose one of the slots in the headrail nearest to the cordlock (this will hold the blind at the height you want when you raise and lower it) and measure the distance from the end of the blind. Use this measurement to fix a bracket on the lintel and do the same thing using a slot that's a similar distance from the other end of the blind, so that your blind is evenly balanced between the two brackets.

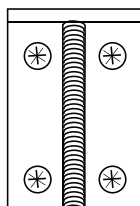


step five

A safety cleat must secure the lift cord when fully retracted. Place the safety cleat onto an adjacent wall. The cleat must be able to hold all the cord when the blind is fully retracted - if not use second cleat provided - mount this at least 15cm above the first cleat (see illustration on right). The cleat must be fixed at least 150cm from floor for safety reasons (as per EU standard EN13120).

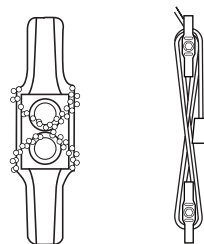

⚠ WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product. To avoid strangulation and entanglement, keep cords out of reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords. Do not tie cords together. Make sure cords do not twist and create a loop.

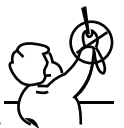

Whilst Decorshade Blind has taken all care to ensure full compliance with the child safety standard EN13120, please note that the responsibility lies with the installer of this blind to ensure that the bottom of the chain loop safety device is at least 150cm (59") above the ground to comply with this standard.